

**Air Pro Error code**

<b>Code</b>	<b>Meaning</b>	<b>Solution</b>	<b>Replacement parts</b>
1	Controller error	Controller failure, please restart the vehicle or contact after-sales service	Controller
2	Motor hall error	Motor failure, please contact after-sales service	Motor
3	Battery failure	Battery failure, please contact after-sales service	Battery
4	Battery low-voltage	Battery voltage is too low, please charge it in time	Battery
5	Battery over-voltage	Battery voltage is too high, please stop using and contact after-sales service	Battery
6	Brake on self-test failure	The brake handle is not released when you turn on the machine, please release it.	Brake handle
7	Throttle on self-test failure	Please release the throttle or check the status of the throttle if the throttle is not released when the machine is turned on.	Throttle
8	/	/	/
9	Dashboard communication failure	Please restart the machine or contact after-sales service for replacement.	Dashboard
10	Controller communication failure	Please restart the machine or contact after-sales service for replacement.	Controller
11	MOS over temperature	Controller board temperature is too high, please stop riding and wait for the temperature to decrease.	Controller
12	Motor over temperature	The temperature is too high, please stop riding and wait for the temperature to decrease	Motor